




SINGER®

Instructions for Fringe Presser Foot

See your sewing machine instruction manual for stitch guide

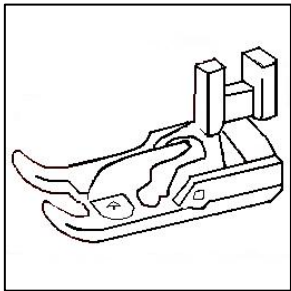

The Fringe Foot is used to create three-dimensional texture on fabrics, producing a fringe effect.

Machine Preparation

- Remove the presser foot and presser foot holder. Attach the Fringe Foot.
- Tighten the thumb screw securely.
- Apply stabilizer behind the fabric, to prevent the stitches from tunneling in.

Eyelash Fringe

1. Set the machine for an Overcast or Overedge Stitch. Select the widest width setting, but a short length setting. Turn the hand wheel toward you slowly, to make sure that the needle clears the foot.
2. Draw a line where you want the left swing of the needle to sew.
3. After sewing the row of stitches, slide the fringe off the foot, toward the back. To create an eyelash effect, use a sharply pointed scissor to trim the thread loops close to the fabric on the right-hand side of the loops. Lightly brush the threads with your finger or a toothbrush on both sides of the fabric.

Loops Intact Fringe

1. Select ZigZag Stitch. Set the stitch width according to the look you want for your project. Set the stitch length for a short setting (about 1mm). Turn the hand wheel toward you slowly, to make sure that the needle clears the foot.
2. Sew several rows next to one another as desired. Remove the presser foot and presser foot holder. Attach the Fringe Foot. Tighten the thumb screw securely.

For Full Video Instructions Visit [YouTube.com/SingerSewingCompany](https://www.youtube.com/SingerSewingCompany)